
1. USB/COM Config:

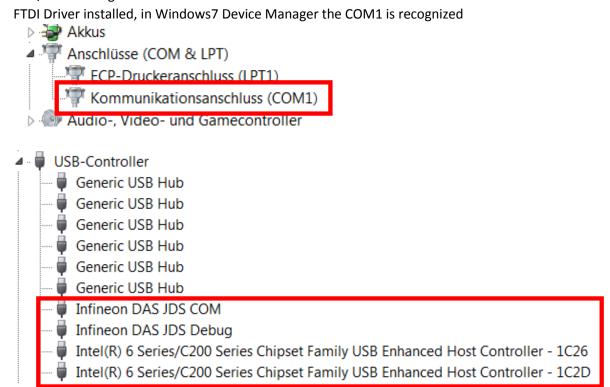

Also the DAS USB Devices are found

2. DAS Configuration

In DAS the UDAS Server is started, but the Device is not recognized.

